

## Quick Start Guide | Windows CE PDAs

### Before you start

This Driver operates with the Windows Mobile 2003 Operating System for Pocket PC.

Check that the Fabric Keyboard has power. The Fabric Keyboard requires 2 x AAA batteries (supplied):

1. Remove the slide-on cover on the Fabric Keyboard
2. Insert 2 x AAA batteries in the correct orientation into the battery compartment
3. Replace the slide-on cover

### Installing the Driver

Your PDA requires a Driver in order to connect to and operate with the Fabric Keyboard. To install the Driver:

Installation via **ActiveSync**:

1. Ensure ActiveSync is installed on your PC before starting
2. Insert the supplied Fabric Keyboard CD into your PC
3. Connect the PC to your PDA using ActiveSync
4. From the CD, run the application called '**FabricKeyboard\_Vxx.exe**'
5. Follow the on-screen prompts displayed on the PC and then on the PDA
6. You may be required to restart your PDA to complete the installation

Installation via **InfraRed** or **Bluetooth**:

1. Insert the supplied Fabric Keyboard CD into your PC
2. Transfer the file '**FabricKeyboard\_Vxx.cab**' from the CD to your PDA via a Bluetooth or InfraRed connection
3. Install the file on the PDA by running it from its location (the default location for transferred files is '**My Documents**')
4. Follow the on-screen prompts displayed on the PC and then on the PDA
5. You may be required to restart your PDA to complete the installation

Installation is now complete. The '**Keyboard**' application will appear in the '**Programs**' section under '**Start Menu**'.

### Connecting to the Fabric Keyboard

To connect the Fabric Keyboard to your PDA:

1. Turn the Fabric Keyboard ON by pressing the ON/OFF button for at least 2 seconds until the green light is ON constantly
2. Establish a pairing with a new device, which is normally done using the Bluetooth Manager Connection Wizard ('**Start Menu**' > '**Settings**' > '**Bluetooth**' > '**Bluetooth Manager**' > '**New**' - see your PDA device instructions for further details). Once the '**ElekSen**'/'**ElekTex Keyboard**'/'**ElekTex**'/'**keyboard**' Bluetooth device is found select it, allow serial port services to be received following the prompts, and exit the Bluetooth Manager once complete.
3. Launch the '**Keyboard**' application ('**Start Menu**' > '**Programs**')
4. On the opening screen, select '**Tap Here to Connect**'
5. You will be directed to the '**Bluetooth Browser**' and after a period of searching the '**ElekSen**'/'**ElekTex Keyboard**'/'**ElekTex**' or '**keyboard**' keyboard device will be displayed

**Note:** if more than one '**ElekSen**'/'**ElekTex Keyboard**'/'**ElekTex**'/'**keyboard**' device appears or a connection problem arises, press '**Refresh**'

## Quick Start Guide | Windows CE PDAs

6. Select the '**Elekсен**'/'**ElekTex Keyboard**'/'**ElekTex**'/'**keyboard**' device – you will be returned to the Fabric Keyboard opening screen, an audible chime will sound and the green light on the Fabric Keyboard will start flashing

**Connection is now complete. Follow the on-screen prompts to perform a calibration (this is recommended, see User Guide for details)**

### Troubleshooting

#### ***PDA will not pair with the Fabric Keyboard?***

- Check that the PDA's Bluetooth is ON from the '**Bluetooth Manager**'
- Check that the Fabric Keyboard is ON and in pairing mode (the green light should be on constantly)
- From the Bluetooth console, where Bluetooth devices are displayed, perform a '**Refresh**' before selecting '**Elekсен**'/'**ElekTex Keyboard**'/'**ElekTex**'/'**keyboard**'

#### ***The characters appearing on screen are not as typed?***

- Perform a calibration. From the Fabric Keyboard application select '**Options**' > '**Calibration**' > '**Start Calibration**' and follow the on-screen instructions

#### ***Bluetooth will not turn ON within the PDA menu?***

- Power cycle the PDA (turn the device OFF and then back ON again) or perform a soft reset

**Disclaimer:** G-Tech warrants its product to be free from defects in material and workmanship for a period of six months from the date of purchase. For warranty service, buyer must provide a copy of the original receipt showing the date of purchase. Warranty applies to original purchaser only and is non-transferable.

If a defect occurs, G-Tech will, at its sole discretion, repair or replace the defective unit. If warranty service involves the exchange of a product, or a part of that product, the item replaced becomes the property of G-Tech. G-Tech reserves the right to use reconditioned parts that are equivalent or superior to original factory specifications. Replacement parts are warranted to be free from defects in material or workmanship for a period of thirty days from the date of repair, or for the remainder of the original period of limited warranty for the product, whichever is longer.

If the customer authorizes G-Tech to perform any services excluded under this limited warranty, the customer is responsible for standard repair fees for such work.

This warranty covers only the normal use for which the product is designed. This warranty does not cover any third party parts, components, or peripheral devices added to G-Tech product, or damage related to accidents, misuse, improper installation, negligence or shipping.

For warranty service, please contact G-Tech for a Return Authorization Number (RAN) and return the product, along with dated proof of purchase and RAN to G-Tech at the following address: 5911 Schaefer Ave., Chino, CA 91710. Please allow approximately 30 days from the date G-Tech receives the product for warranty service repairs.

ETP-1836